


TÖV

FURNITURE



Laylah Headbaord

Laylah

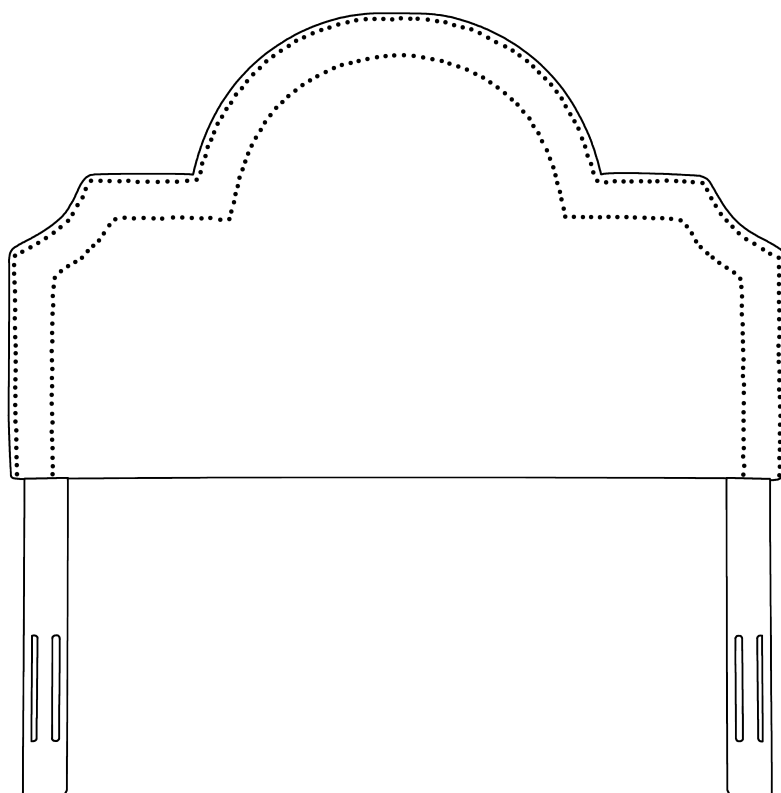



ASSEMBLY INSTRUCTIONS



PARTS LIST

LABEL	PICTURE	DESCRIPTION	QTY
A		Headboard	1
B		Metal Leg	2

HARDWARE

LABEL	PICTURE	DESCRIPTION	QTY
E		Metal Gasket	12
F		Small Bolt	4
G		Big Bolt	4
H		Nut	4

BEFORE BEGINNING ASSEMBLY:



Read instructions cover to cover



Have two adults on hand for assembly




Do NOT assemble on flooring or carpet. Assemble on a clean non-marring surface (ex: packing foam)



Save all packaging until assembly is completed


ASSEMBLY STEPS

STEP 1

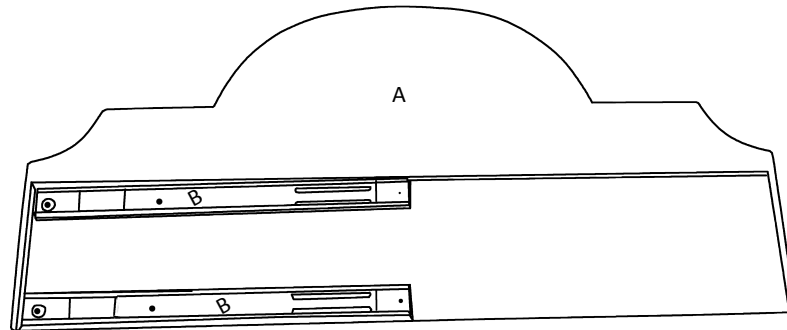


› Position the product on its back as shown. › Remove the legs(B) from the back of headboard (A)

STEP 2

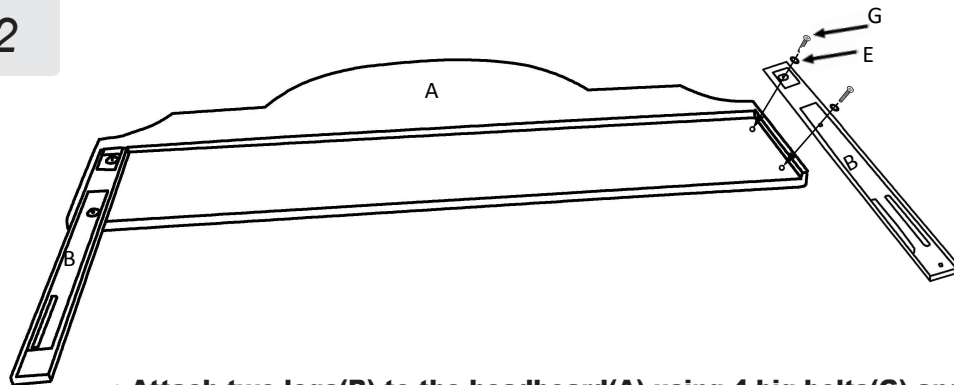


› Attach two legs(B) to the headboard(A), using 4 big bolts(G) and 4 metal gasket(E). The vertical slots at the lower parts of the legs must be facing the outside of the bed.

STEP 3

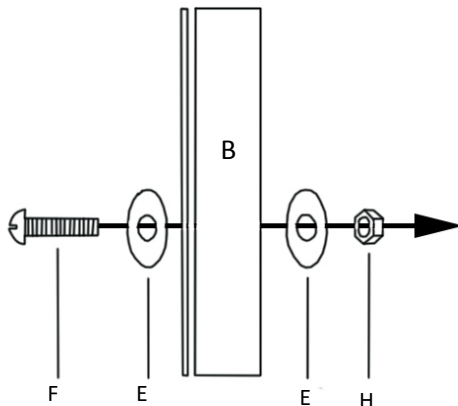

› The hardware needed to connect the headboard to the bed frame are 4 small bolts(F) 8 metal gasket(E) and 4 nuts(H)

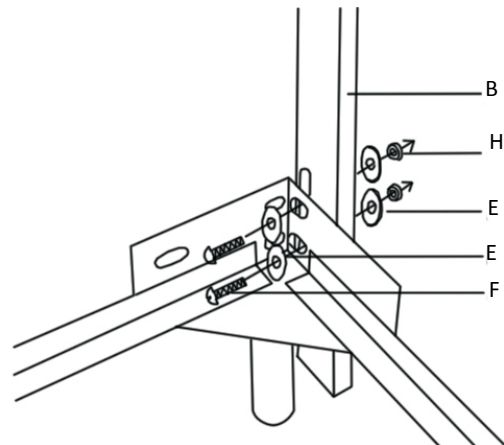

› Attach the Legs(B) of Headboard(A) to the bed frame by fixing them together through the 2 holes in the bed frame and vertical slot in the leg using 4 small bolts(F) 8 metal gasket (E) and 4 nuts (H).